USB OUTPUT INTERFACE

Connecting series 208 (software is included)

Connecting 206 (software is included)

For following series 208 (counterforlinear gauge)





208-008-01



For following 206



Work with series 208 (counter for linear gauge)



