


- ◆ Center cylinders or holes on machine tools
- ◆ Can be used with dial test indicators or dial indicators

clamping

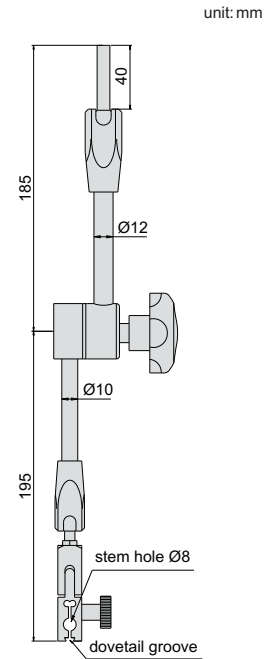

Code

686-080-01